

SEZNAM A SOUŘADNICE ZÁKLADNÍCH VYTYČOVACÍCH BODŮ

Č.B.	Poloha X	Poloha Y
01	-732958.1532	-1039040.5261
02	-732957.4587	-1039036.0801
03	-732956.6414	-1039030.8480
04	-732955.9469	-1039026.4019
05	-732955.6383	-1039024.4259
06	-732959.6180	-1039023.8042
07	-732959.9267	-1039025.7803
08	-732960.6212	-1039030.2264
09	-732985.9385	-1039019.6929
10	-732984.7146	-1039021.9083
11	-732986.3427	-1039022.2801
12	-732986.6280	-1039026.2671
13	-732985.4091	-1039026.3544
14	-732984.5073	-1039031.8550
15	-732985.2018	-1039036.3010
16	-732985.7754	-1039036.8544
17	-732985.1077	-1039042.3938
18	-732990.4664	-1039042.0696
19	-732990.2186	-1039037.9735
20	-732993.9450	-1039033.7408
21	-733005.2281	-1039032.9880
22	-733010.2812	-1039032.6508
23	-733009.7637	-1039025.4478
24	-733004.7512	-1039025.8393
25	-733004.1892	-1039025.0102
26	-733003.8910	-1039020.5201
27	-732991.8943	-1039018.7625
28	-732992.2984	-1039021.3498
29	-732992.6197	-1039025.8383