

ENSTALL

Project plan

FVE MŠ U vysočanského pivovaru,
Roof B

Location: U Vysočanského pivovaru, 190 00
Praha 9, Czechia

Calculation date: 08-07-2025

FlatFix Fusion

Table of contents

Overview	4
General	4
Location	4
Roof specification	4
System specification	5
Complete list of materials	6
Total roof bill of materials	6
Number of ballast units	6
Assembly	7
Roof overview	7
Side view	7
Rear view	7
Segment 1	8
Ballast	8
Materials	9
Segment 2	10
Ballast	11
Materials	12
Segment 3	13
Ballast	14
Materials	15
Segment 4	16
Ballast	16
Materials	17
Calculations	18
Input	18
Roof loads	19
Roof loads for segment 1	20
Roof loads for segment 2	21
Roof loads for segment 3	22
Roof loads for segment 4	23



Scan the code for the
product manual.

Overview

General

Expected installation date	30-10-2025
Generated by	Tomáš Tajtl (tomas.tajtl@eletajenergy.cz)*

* This person can open this project in the calculator via <https://calculator.eu.enstall.com/3250399/4204769>.

Location

Address	U Vysočanského pivovaru, 190 00 Praha 9, Czechia
Wind zone	1*
Terrain category	II
Wind pressure	713.7 N/m ²
Snow zone	1*
Characteristic value of snow on the ground	0.7 kN/m ²
Environment	Normal
Snow load on the roof	426.63 N/m ²
Altitude above sea level	199.0 m*
Consequence class	CC1
Reference period	15 years
Calculation date	08-07-2025

* Automatically determined based on the address.

Roof specification

Roof height	15.0 m
Parapet height	20 mm
Edge zone depth short side	0.93 m
Edge zone depth long side	3.0 m
Roof pitch	0.0°
Roofing material	PVC
Roof orientation from north	-23.0°

System specification

Panel model	Aiko A-MAH54Db (GEN II) (440 - 460Wp) Neostar 2S+ (2nd generation)
Panel dimensions	1757 mm x 1134 mm x 30 mm
Panel weight	24.0 kg
Panel count	48
Panel angle of inclination landscape	11.3°
Configuration	Dual
Orientation	Landscape
Row distance	2,374 mm
Grounding/bonding option	OFF
Segment count	4
Panel power	460 Wp
Total power	22.080 kWp

Complete list of materials

Total roof bill of materials

Article number	Description	Amount
1000612	Mounting screw M6 x 12mm	33
1000655	Mounting screw M6 x 55mm	132
1003022	Universal mid clamp with bonding	60
1004330	FlatFix end clamp 30mm	72
1007011	FlatFix Fusion base plate bracket	38
1007012	FlatFix Fusion base plate	160
1007022	FlatFix Fusion - Low base	66
1007031	FlatFix Fusion high base	33
1007042*	MLPE Clip Lightweight up to 2kg	48
1007121	FlatFix Fusion base profile 210mm	16
1007196	FlatFix Fusion base profile 1077mm	66
1007210	FlatFix Fusion ballast container 1700	40
1007211	FlatFix Fusion stabilizer 1700	24
1007226	FlatFix Fusion wind deflector left (base profile 1030mm - 1077mm)	18
1007227	FlatFix Fusion wind deflector right (base profile 1030mm - 1077mm)	18
1008085	Self-tapping sheet metal screw 6,0x25 mm SW10 HEX/T30	148


* Optional article

Number of ballast units

Number of bricks (210 mm x 105 mm x 80 mm, 4.0 kg/pc)	467
---	-----


Assembly

Roof overview

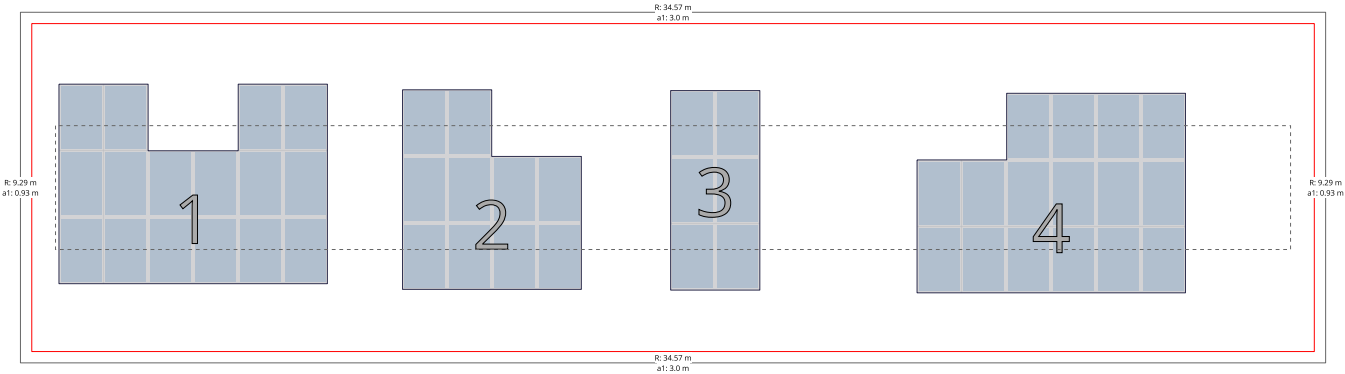


R: XXm	Length of outer roof side
—	No-Go zone width (30cm)
a1: XXm	Edge zone width from roof edge

Dual landscape configuration with row distance of 2,374 mm

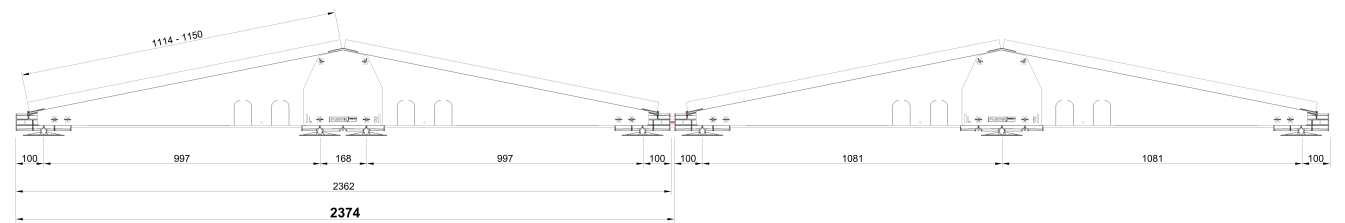

Rear view

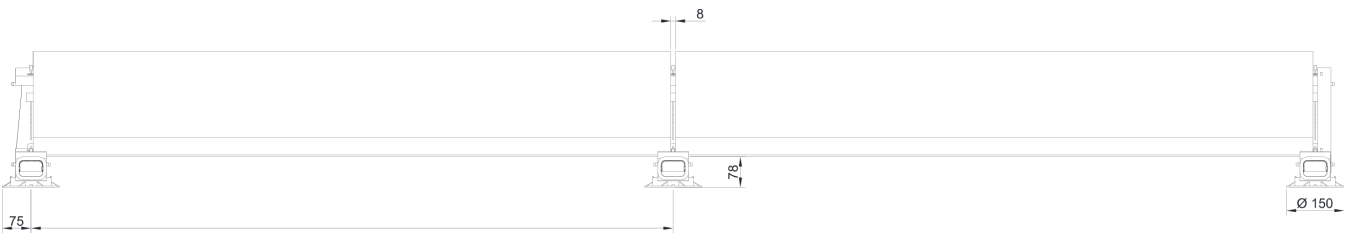


Segment 1

Panel count	16
Total power	7.360 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,374 mm
Grounding/bonding option	OFF



 This assembly plan is applicable for the highlighted segments

Ballast

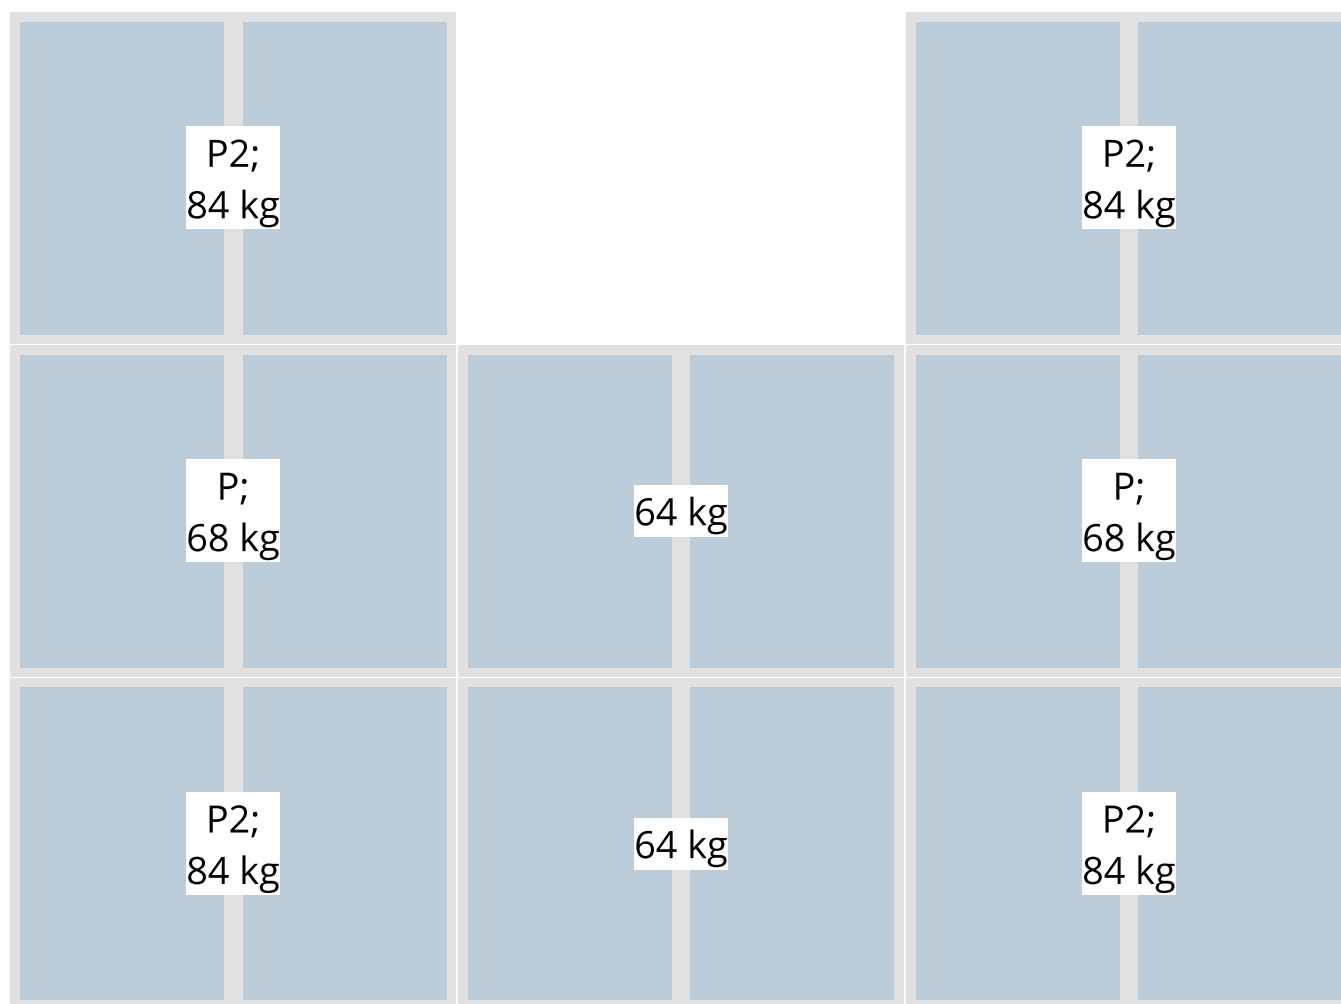

Check the manual for more information on the exact (perimeter) positions of the ballast containers.

Weight per ballast unit	4.0 kg
Number of ballast units	150

Materials

Article number	Description	Amount
1000612	Mounting screw M6 x 12mm	11
1000655	Mounting screw M6 x 55mm	44
1003022	Universal mid clamp with bonding	20
1004330	FlatFix end clamp 30mm	24
1007011	FlatFix Fusion base plate bracket	12
1007012	FlatFix Fusion base plate	52
1007022	FlatFix Fusion - Low base	22
1007031	FlatFix Fusion high base	11
1007042	MLPE Clip Lightweight up to 2kg	16
1007121	FlatFix Fusion base profile 210mm	6
1007196	FlatFix Fusion base profile 1077mm	22
1007210	FlatFix Fusion ballast container 1700	12
1007211	FlatFix Fusion stabilizer 1700	8
1007226	FlatFix Fusion wind deflector left (base profile 1030mm - 1077mm)	6
1007227	FlatFix Fusion wind deflector right (base profile 1030mm - 1077mm)	6
1008085	Self-tapping sheet metal screw 6,0x25 mm SW10 HEX/T30	48


Segment 2

Panel count	10
Total power	4.600 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,374 mm
Grounding/bonding option	OFF



 This assembly plan is applicable for the highlighted segments

Ballast

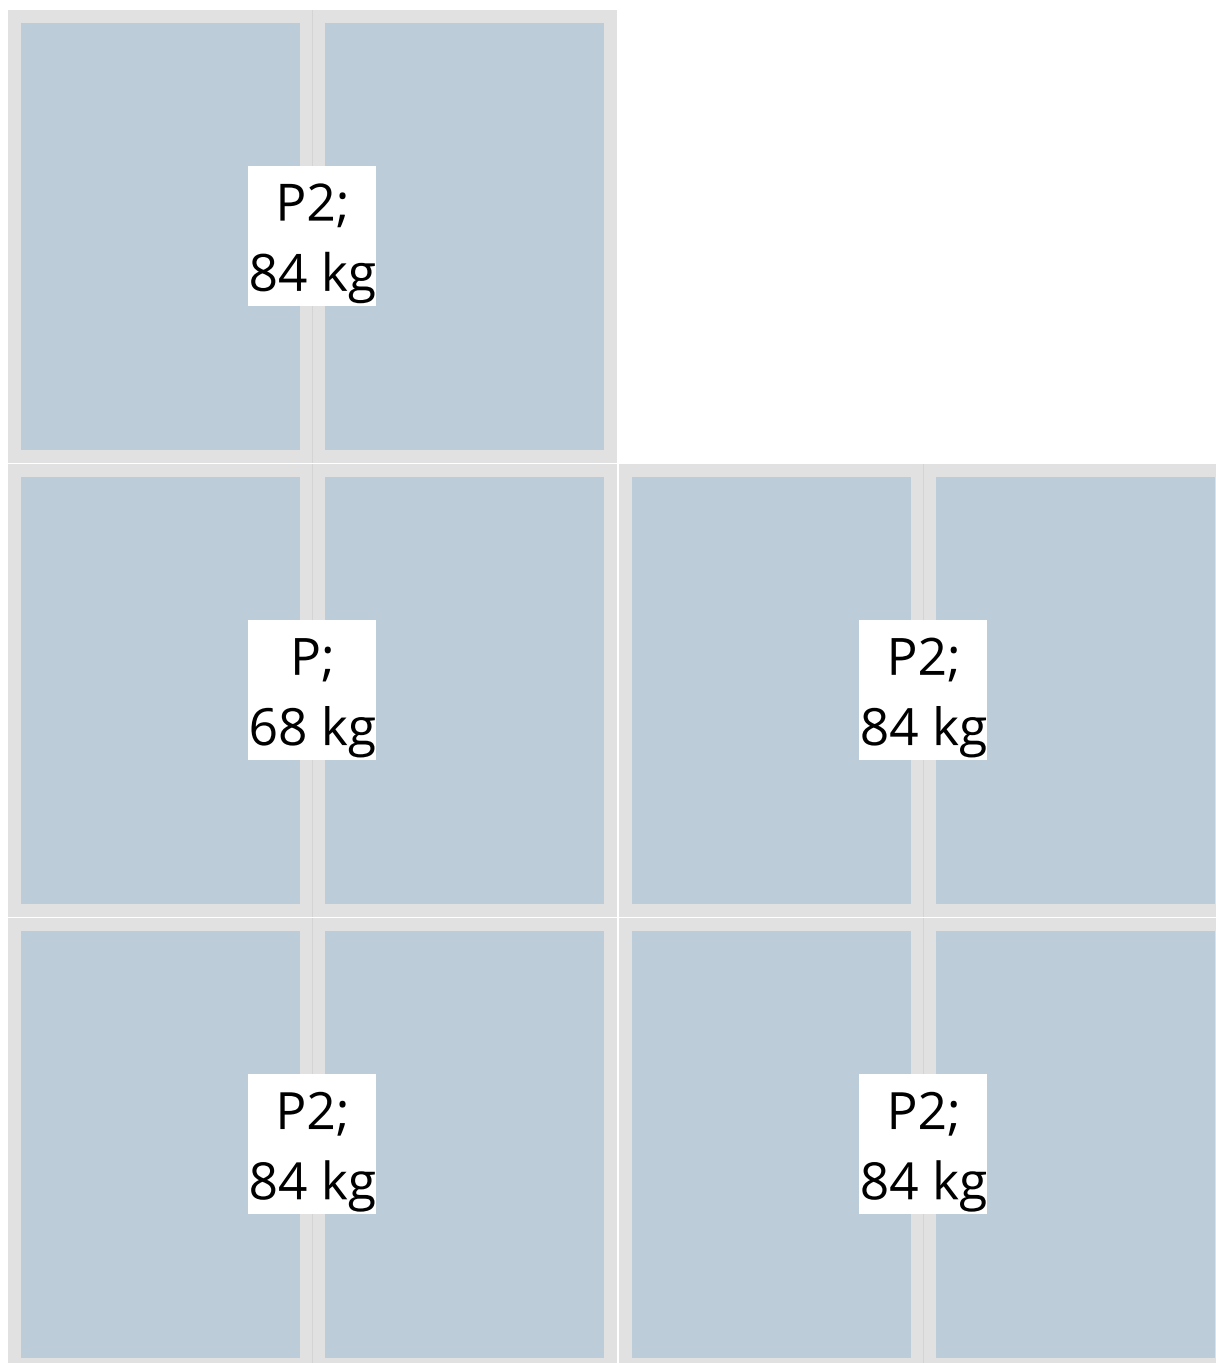

Check the manual for more information on the exact (perimeter) positions of the ballast containers.

Weight per ballast unit	4.0 kg
Number of ballast units	101

Materials

Article number	Description	Amount
1000612	Mounting screw M6 x 12mm	7
1000655	Mounting screw M6 x 55mm	28
1003022	Universal mid clamp with bonding	12
1004330	FlatFix end clamp 30mm	16
1007011	FlatFix Fusion base plate bracket	9
1007012	FlatFix Fusion base plate	35
1007022	FlatFix Fusion - Low base	14
1007031	FlatFix Fusion high base	7
1007042	MLPE Clip Lightweight up to 2kg	10
1007121	FlatFix Fusion base profile 210mm	3
1007196	FlatFix Fusion base profile 1077mm	14
1007210	FlatFix Fusion ballast container 1700	9
1007211	FlatFix Fusion stabilizer 1700	5
1007226	FlatFix Fusion wind deflector left (base profile 1030mm - 1077mm)	4
1007227	FlatFix Fusion wind deflector right (base profile 1030mm - 1077mm)	4
1008085	Self-tapping sheet metal screw 6,0x25 mm SW10 HEX/T30	34


Segment 3

Panel count	6
Total power	2.760 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,374 mm
Grounding/bonding option	OFF



 This assembly plan is applicable for the highlighted segments

Ballast

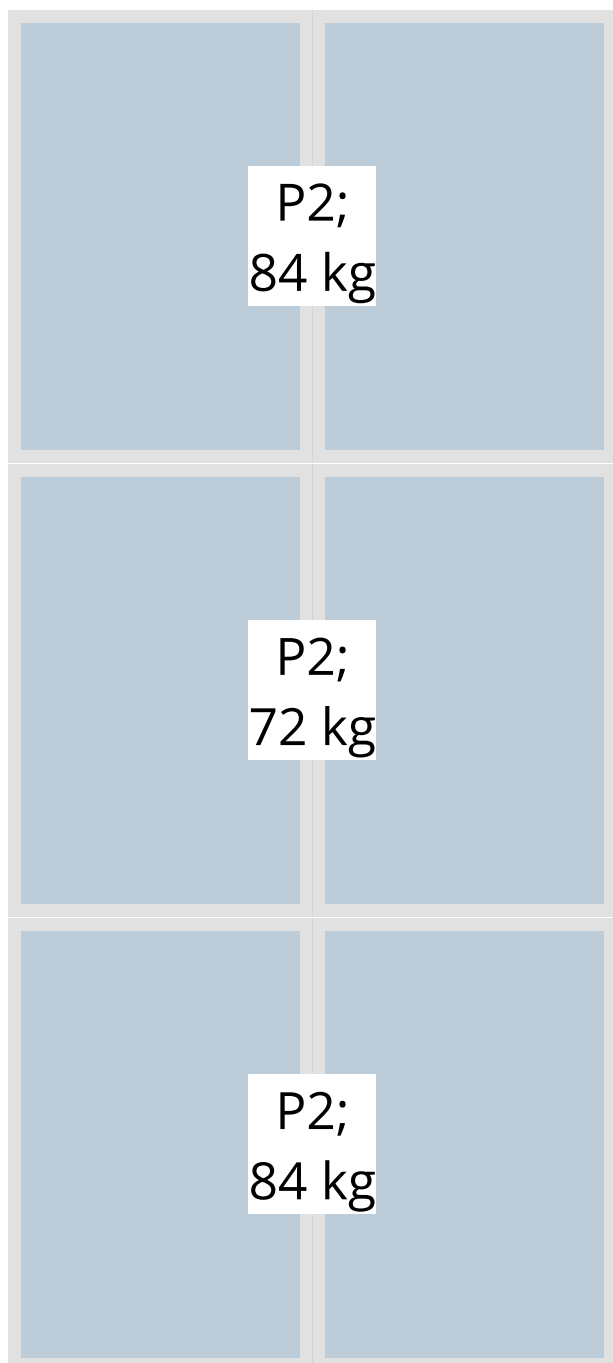

Check the manual for more information on the exact (perimeter) positions of the ballast containers.

Weight per ballast unit	4.0 kg
Number of ballast units	60

Materials

Article number	Description	Amount
1000612	Mounting screw M6 x 12mm	4
1000655	Mounting screw M6 x 55mm	16
1003022	Universal mid clamp with bonding	8
1004330	FlatFix end clamp 30mm	8
1007011	FlatFix Fusion base plate bracket	8
1007012	FlatFix Fusion base plate	20
1007022	FlatFix Fusion - Low base	8
1007031	FlatFix Fusion high base	4
1007042	MLPE Clip Lightweight up to 2kg	6
1007196	FlatFix Fusion base profile 1077mm	8
1007210	FlatFix Fusion ballast container 1700	6
1007211	FlatFix Fusion stabilizer 1700	3
1007226	FlatFix Fusion wind deflector left (base profile 1030mm - 1077mm)	2
1007227	FlatFix Fusion wind deflector right (base profile 1030mm - 1077mm)	2
1008085	Self-tapping sheet metal screw 6,0x25 mm SW10 HEX/T30	24


Segment 4

Panel count	16
Total power	7.360 kWp
Configuration	Dual
Orientation	Landscape
Row distance	2,374 mm
Grounding/bonding option	OFF



 This assembly plan is applicable for the highlighted segments

Ballast

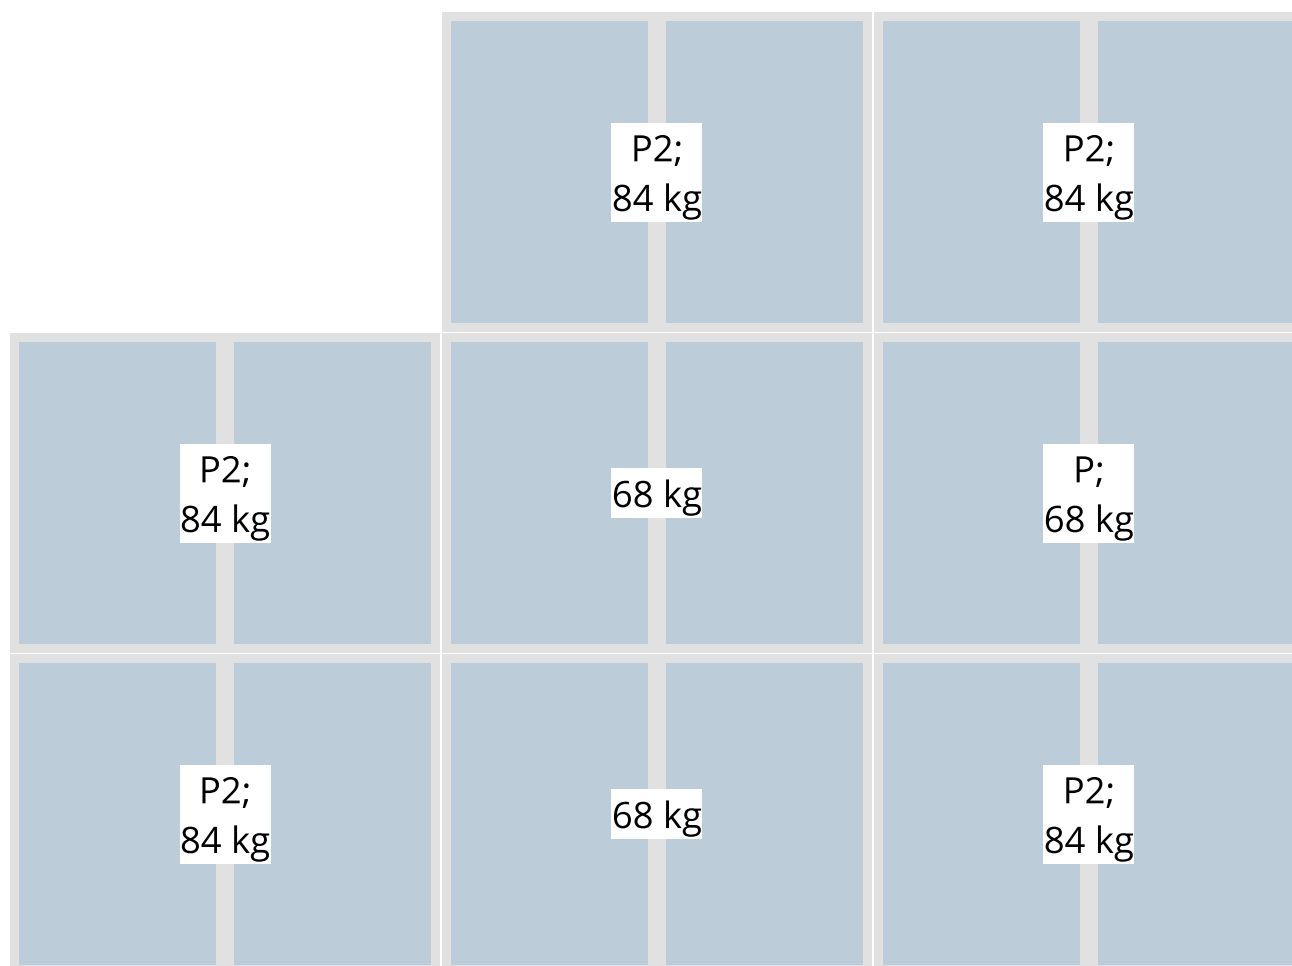

Check the manual for more information on the exact (perimeter) positions of the ballast containers.

Weight per ballast unit	4.0 kg
Number of ballast units	156

Materials

Article number	Description	Amount
1000612	Mounting screw M6 x 12mm	11
1000655	Mounting screw M6 x 55mm	44
1003022	Universal mid clamp with bonding	20
1004330	FlatFix end clamp 30mm	24
1007011	FlatFix Fusion base plate bracket	9
1007012	FlatFix Fusion base plate	53
1007022	FlatFix Fusion - Low base	22
1007031	FlatFix Fusion high base	11
1007042	MLPE Clip Lightweight up to 2kg	16
1007121	FlatFix Fusion base profile 210mm	7
1007196	FlatFix Fusion base profile 1077mm	22
1007210	FlatFix Fusion ballast container 1700	13
1007211	FlatFix Fusion stabilizer 1700	8
1007226	FlatFix Fusion wind deflector left (base profile 1030mm - 1077mm)	6
1007227	FlatFix Fusion wind deflector right (base profile 1030mm - 1077mm)	6
1008085	Self-tapping sheet metal screw 6,0x25 mm SW10 HEX/T30	42

Calculations

Input

Address	U Vysočanského pivovaru, 190 00 Praha 9, Czechia
Wind zone	1 (22.5 m/s)*
Terrain category	II
Air density	1.25 kg/m ³
Wind exposure factor (c_e)	2.62
Orography factor	1.0
Wind pressure	713.7 N/m ²
Snow zone	1*
Characteristic value of snow on the ground	0.7 kN/m ²
Topography (snow exposure factor)	Normal (1.0)
Snow load form coefficient	0.8
Snow load on the roof	426.63 N/m ²
Altitude above sea level	199.0 m*
Consequence class	CC1
Reference period	15 years
Roof height	15.0 m
Parapet height	20 mm
Edge zone depth short side	0.93 m
Edge zone depth long side	3.0 m
Roof pitch	0.0°
Roof area	321.16 m ²
Roofing material	PVC
Friction Coefficient	0.45
Roof orientation from north	-23.0°
High building safety factor	1.19
Panel model	Aiko A-MAH54Db (GEN II) (440 - 460Wp) Neostar 2S+ (2nd generation)
Panel dimensions	1757 mm x 1134 mm x 30 mm
Panel weight	24.0 kg
Panel count	48
Panel angle of inclination landscape	11.3°

Configuration	Dual
Orientation	Landscape
Row distance	2,374 mm
Grounding/bonding option	OFF
Segment count	4
Panel power	460 Wp
Total power	22.080 kWp

* Automatically determined based on the address.

Enstall's FlatFix Fusion calculation is certified by Peutz. The certificate show that Enstall has correctly applied the wind tunnel measurements for FlatFix Fusion, combined with results of mechanical lift tests and that all results have been correctly and safely processed in the Enstall calculator. The results of the studies and their translation into a method for calculating ballast have been tested against the standards CUR Recommendation 103: 2005, NEN 7250: 2021 and the Eurocodes EN 1990 and EN 1991-1-4 with their corresponding national annexes.



Roof loads


Total weight	3,326.77 kg
Total ballast weight	1,868.0 kg
Total system weight	306.77 kg
Total panel weight	1,152.0 kg
Number of ballast units (210mm x 105mm x 80mm)	467
Roof area (gross)	321.16 m ²
System area (projected area)	101.61 m ²
Average load over roof area	10.36 kg/m ²
Average load over system area	32.74 kg/m ²
Max load over panel area	34.46 kg/m ²
Max static point load (at base plate)	17.36 kPa*, 31.28 kg/base plate
Max dynamic point load (at base plate)	59.33 kPa*, 106.87 kg/base plate

* Irregularities in the roof can cause deviating point pressures

Roof loads for segment 1

Total weight	1,081.53 kg
Total ballast weight	600.0 kg
Total system weight	97.53 kg
Total panel weight	384.0 kg
System area (projected area)	33.88 m ²
Average roof load over system area	31.93 kg/m ²
Max static point load (at base plate)	17.06 kPa, 30.73 kg/base plate
Max dynamic point load (at base plate)	58.96 kPa, 106.21 kg/base plate


8.12 kPa  17.06 kPa

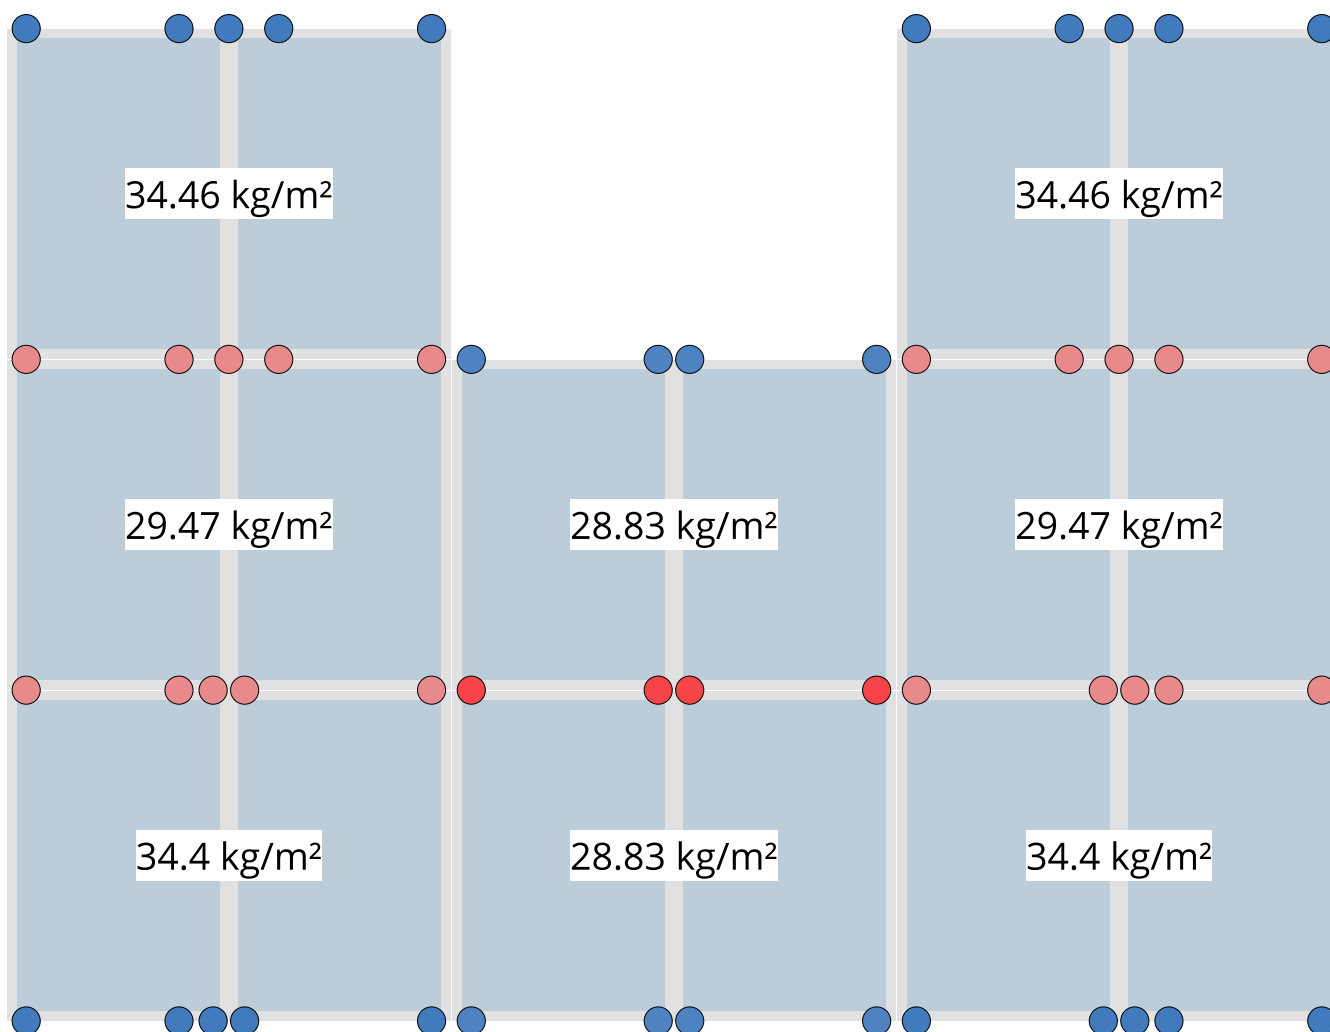

Roof loads for segment 2

Total weight	711.31 kg
Total ballast weight	404.0 kg
Total system weight	67.31 kg
Total panel weight	240.0 kg
System area (projected area)	21.18 m ²
Average roof load over system area	33.58 kg/m ²
Max static point load (at base plate)	16.24 kPa, 29.26 kg/base plate
Max dynamic point load (at base plate)	50.32 kPa, 90.65 kg/base plate


8.12 kPa  16.24 kPa

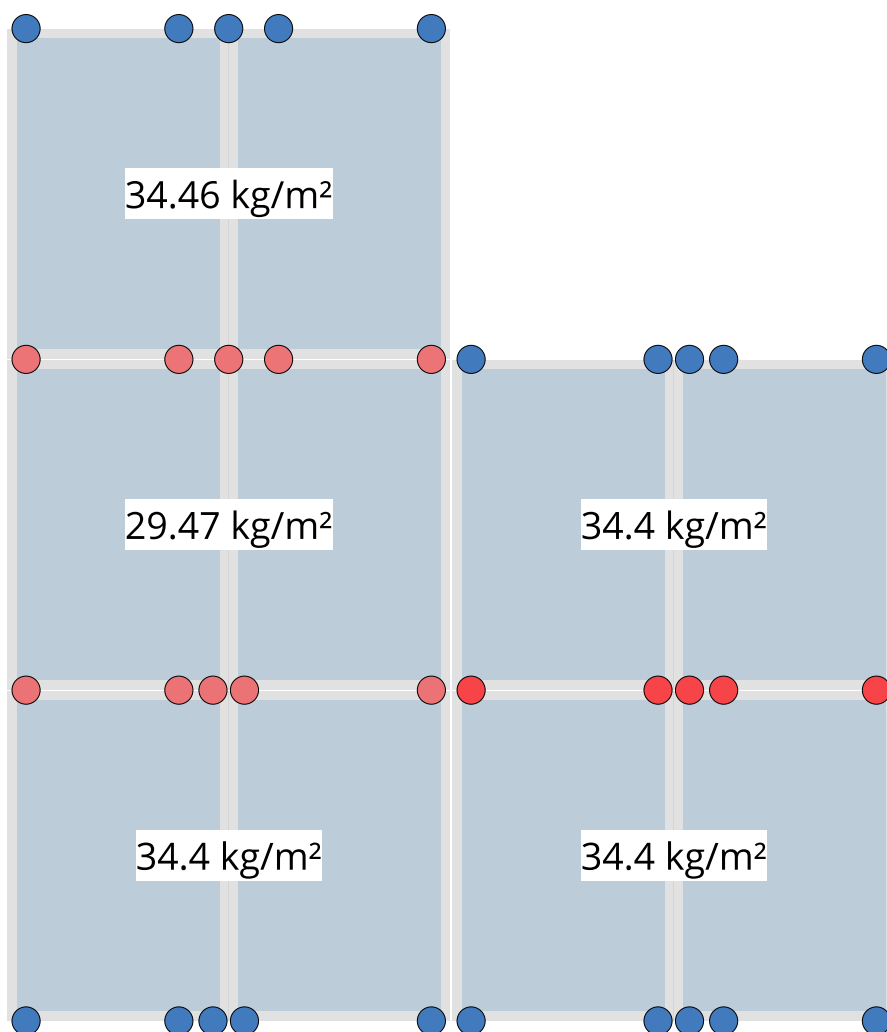

Roof loads for segment 3

Total weight	424.89 kg
Total ballast weight	240.0 kg
Total system weight	40.89 kg
Total panel weight	144.0 kg
System area (projected area)	12.65 m ²
Average roof load over system area	33.58 kg/m ²
Max static point load (at base plate)	15.36 kPa, 27.68 kg/base plate
Max dynamic point load (at base plate)	49.25 kPa, 88.72 kg/base plate


8.12 kPa  15.36 kPa

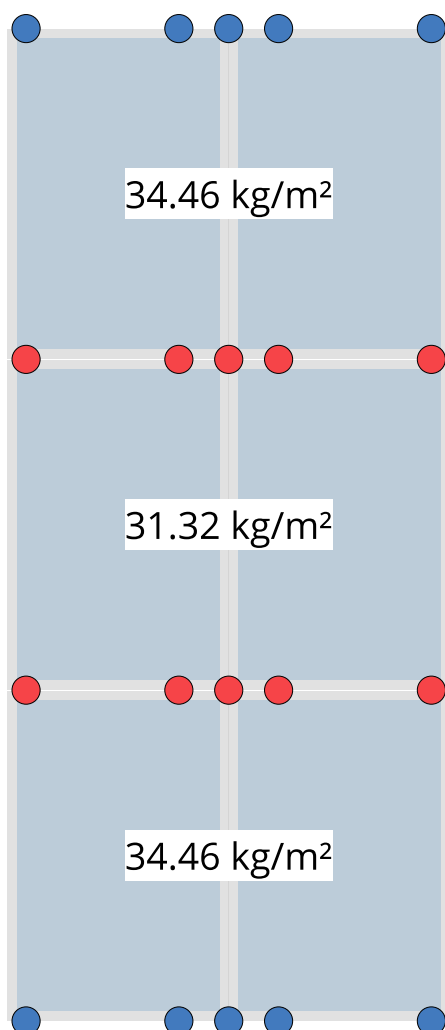

Roof loads for segment 4

Total weight	1,109.04 kg
Total ballast weight	624.0 kg
Total system weight	101.04 kg
Total panel weight	384.0 kg
System area (projected area)	33.9 m ²
Average roof load over system area	32.72 kg/m ²
Max static point load (at base plate)	17.36 kPa, 31.28 kg/base plate
Max dynamic point load (at base plate)	59.33 kPa, 106.87 kg/base plate

8.12 kPa  17.36 kPa

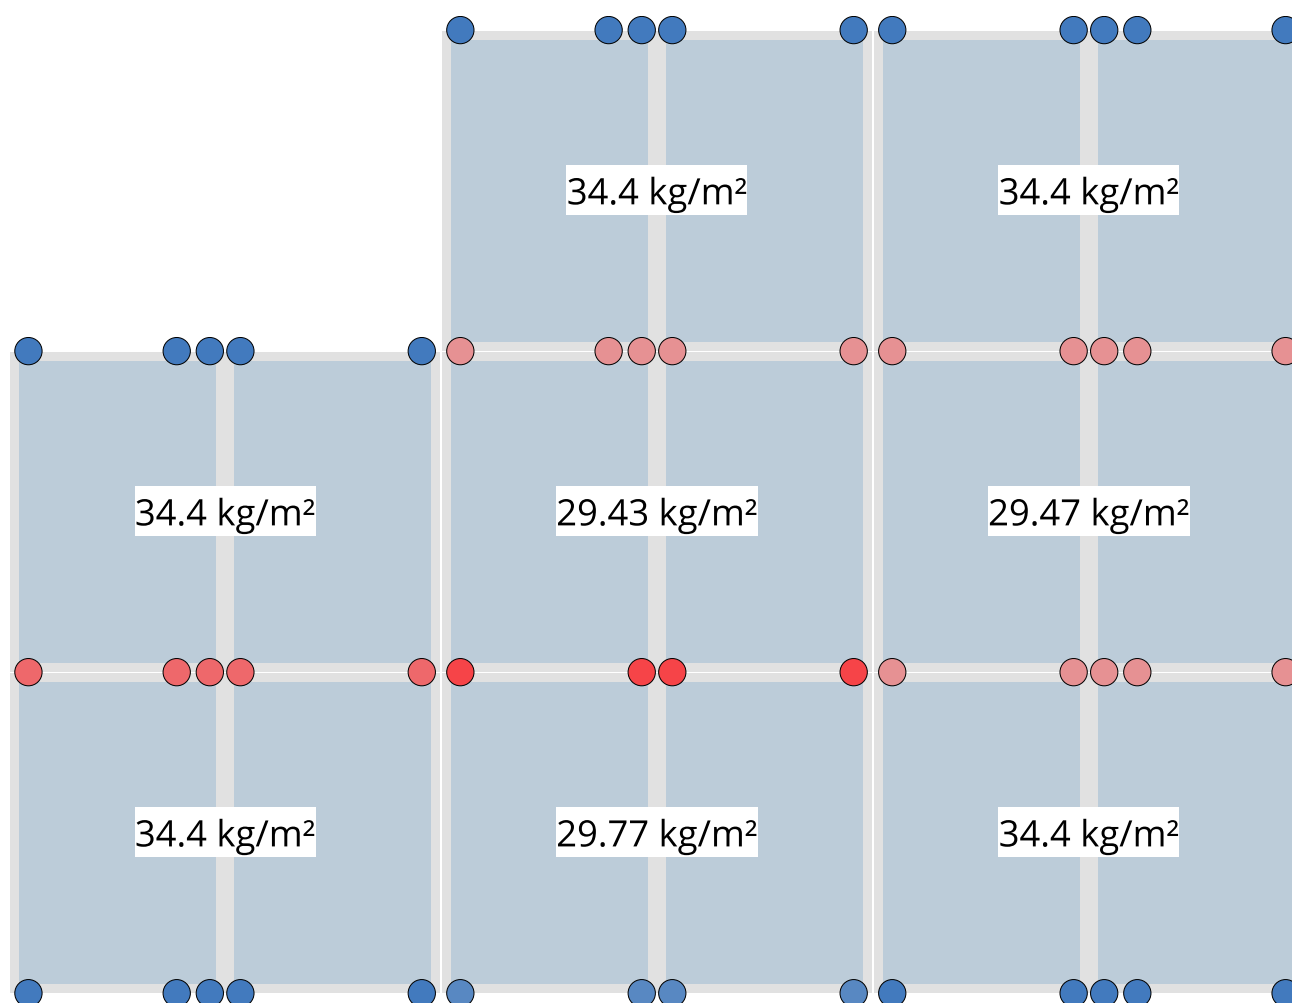

Disclaimer

Please read this information carefully before starting with the design and installation of the PV system.

The output for the design of the PV system is generated by using the calculator tool made available through the website of Enstall Europe B.V. ("Enstall") at www.enstall.com (the "Calculator"). The responsibility for the correct application of the output derived from the Calculator lies with the user of the Calculator and/or the installer or any other person responsible for the installation of the PV system, which output may be subject to or impacted by many different variables and factors. The installation of a PV system onto an existing building can for example impact the existing building loads (e.g., as a result of snow and wind) or the building construction. To avoid personal injury and/or property damages, the installer or any other person responsible for the installation of a PV system should ensure that the static calculations applicable to the existing building are reviewed and confirmed beforehand by a qualified technician. Any applicable regulations, including (but not limited to) NEN 7250, EN 1990, EN 1991-1-3, EN 1991-1-4 and relevant national annexes, should be observed and adhered to. Failure to obtain such confirmation or observe and adhere to applicable regulations may, amongst others, lead to failure of the roof load-bearing structure of the building. It is advisable to consult with the insurer of the building in case of the intention to install a PV system or in case of any other intended changes to the building.

The installer or any other person responsible for the installation of a PV system should also consider, confirm or control applicable design elements which include (but are not limited to):


- a. changes as a result of the additional weight of the complete PV system on the building;
- b. changes as a result of the changed geometry of the building's roof;
- c. changes as a result of the dynamic wind pressure and possible accumulation of rain or any other precipitation on the building;
- d. the loads occurring during installation on the building, roofing material and insulation;
- e. the compatibility of the insulation and roofing material at the location of the contact points of the long-term PV-system's support structure, as a result of the pressure point;
- f. the compatibility of the roofing material in combination with the support structure at the location of the contact points;
- g. the effect of thermal performance of the building on the PV system and vice versa; and/or
- h. the effect of any movement and vibrations of the roof on the PV system and vice versa.

In addition, the installer or any other person responsible for the installation of a PV system should confirm the compatibility of any third party products, components or materials (including PV panels) used in conjunction with Enstall's products, if such third party products, components or materials have not been provided for such use by or on behalf of Enstall or the use of which has not been expressly authorized by Enstall. Reference to a third party product in the Calculator should not be deemed an express or implied authorization by Enstall. Enstall's products should always be used in accordance with instructions set out in the most recent version of the applicable manual, available via www.enstall.com.

Prices in the Calculator are indicative and are subject to change resulting from, amongst others, fluctuations in commodity prices.

To generate output from the Calculator Enstall relies solely on the input and information that was submitted by the user of the Calculator. Enstall is under no obligation to confirm or verify such input or information. Enstall assumes no responsibility or liability of any kind in relation to, or resulting from, such input and/or information, and/or any risks, consequences or damages (including, but not limited to, indirect or consequential losses) resulting from incorrect, inaccurate, or incomplete input and/or information that was submitted through the Calculator or resulting from the improper use of Enstall's products. Any such responsibilities and liabilities are solely for the account of the user of the Calculator and/or any other person responsible for the installation of a PV system, as applicable.

No rights can be derived from any designs (including drawings and dimensions), calculations or other output that is generated through the Calculator. Enstall provides no representations, warranties or guarantees in relation to any designs (including drawings and dimensions), calculations or other output that is generated through the Calculator. Any warranty provided by Enstall is limited to its solar rooftop mounting products, as set out in Enstall's Warranty Conditions (and subject to the limitations and exclusions set out therein) which are available via www.enstall.com. Nothing contained in this output, the Calculator, the Calculator Terms of Use, on any Enstall website or otherwise should be construed differently.

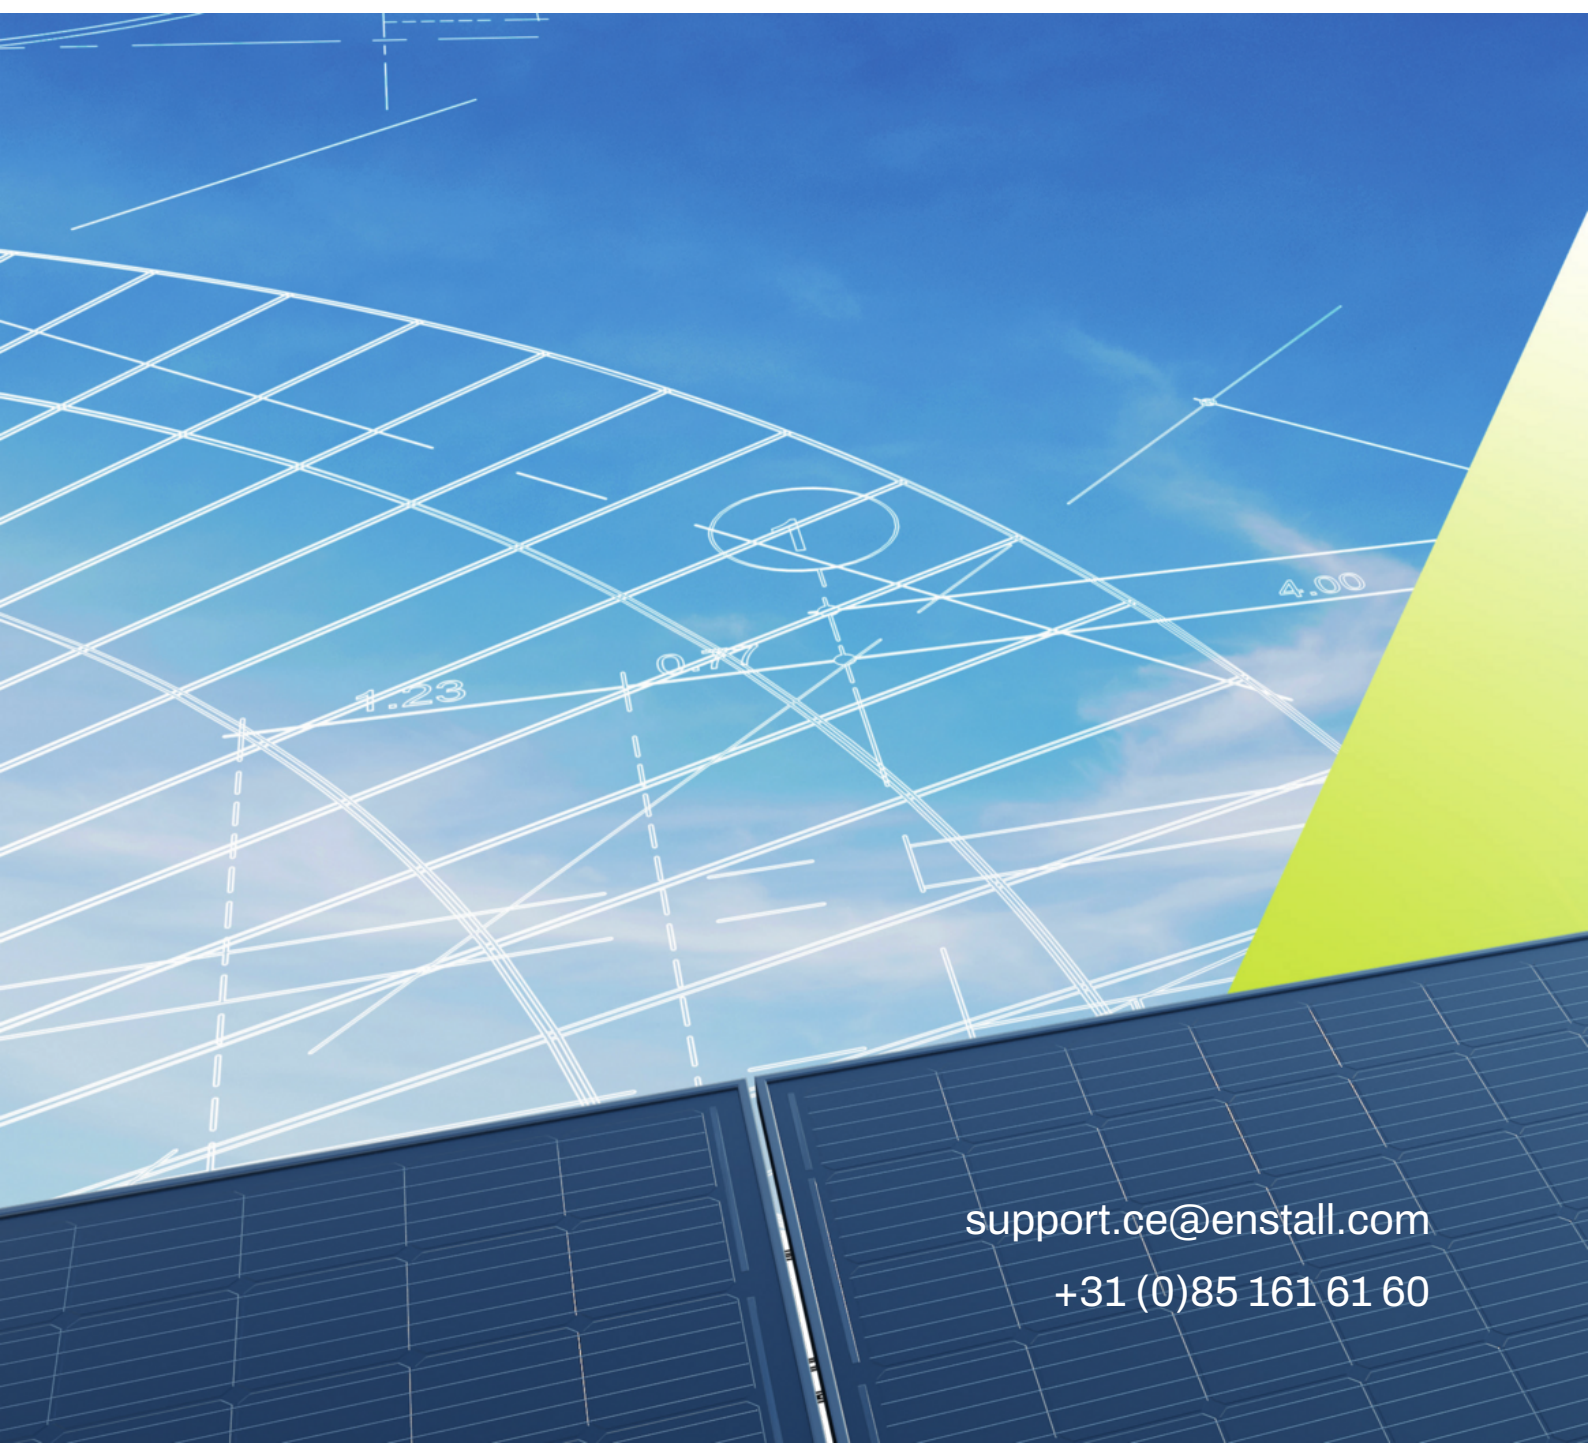

support.ce@enstall.com

+31 (0)85 161 61 60